

Special Instructions for SPS-500 LM048 Installations

How to Verify Your LM048 Version

1. Download and install the LM048 setup utility: [LM149 Config v1.4 Setup.zip](#). (To find the utility, go to the dealer area of www.crs-usa.com, click the ECR/POS Peripherals tab, and then select the icon for the LM048SPA2 Cable Eliminator.)
2. Plug the LM048 into a serial port on your PC
3. Start the utility. From the Configuration Tool screen click Get Device Info.
4. The version will display as shown below.

