
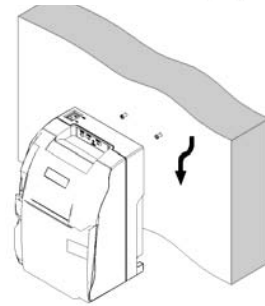


SNBC BTP-M280 Wall Mount Instructions

As a standard feature, the BTP-M280 can be wall mounted using the mounting holes provided on the bottom of each unit. When wall mounted, the printer must be oriented upwards. Wall mount screws must be secure to avoid printer damage or risk of falling.

1. Use sturdy screws, or plastic wall anchors with screws. The screw head must be less than 6mm diameter to fit in the printer wall-mount holes. Use the actual-size template below to locate the mounting screws on the wall.
2. Install the screws keeping a distance of 10mm between the screw head and the wall.
3. Hang the printer as shown.

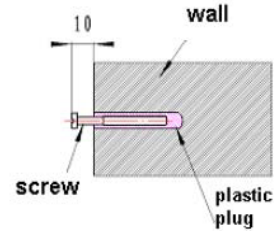

Wall Mount Template

