

Feed Button Program Guide

Receipt Printer

BTP-R580



Shandong New Beiyang Information Technology Co., Ltd.

Contents

Parameter setting (configuring) by Feed button.....1

Parameter setting by Feed button.....1

Setting configuration of the printer1

Configuration of the serial interface2

Setting Mechanism and Hardware2

Print Setting.....3


Paper Near-end Sensor setting.....3

Set Default Configuration.....3


Parameter setting (configuring) by Feed button

- 1) Hold the FEED button pressed while switching the printer on.
- 2) After the printer has printed the configuration sheet, press and hold the FEED button to configure the printer. The main menu for the key-stroke setting procedure is printed.
- 3) The procedure consists of several sub-menus and step-by-step working is needed.
- 4) With every choice is a number. This number indicates the number of times the FEED button has to be shortly pressed. After this, the choice is validated by an additional, but longer press of the FEED button (1 sec).
- 5) After all settings have been done, they are stored in the printer by stepping back through the submenus to the main menu by using the number "1" plus additional press for validation.


Parameter setting by Feed button

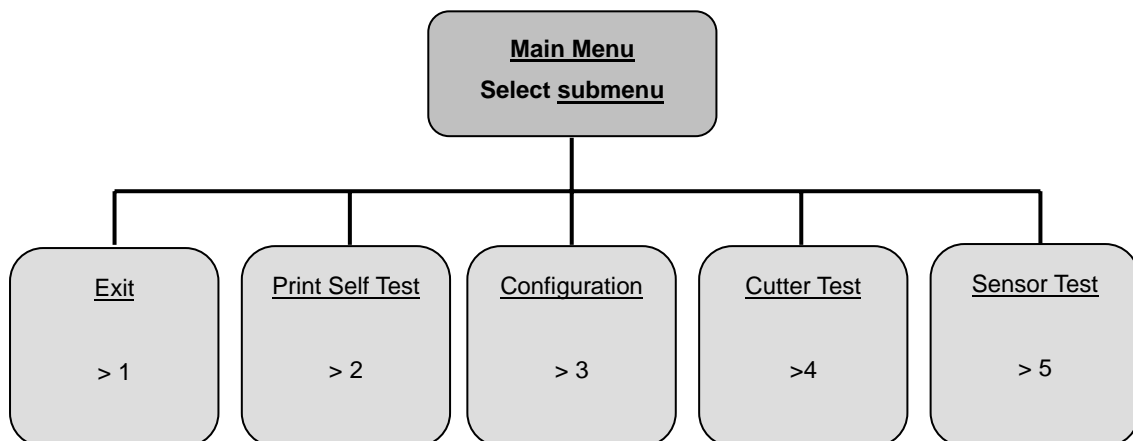

Setting configuration of the printer

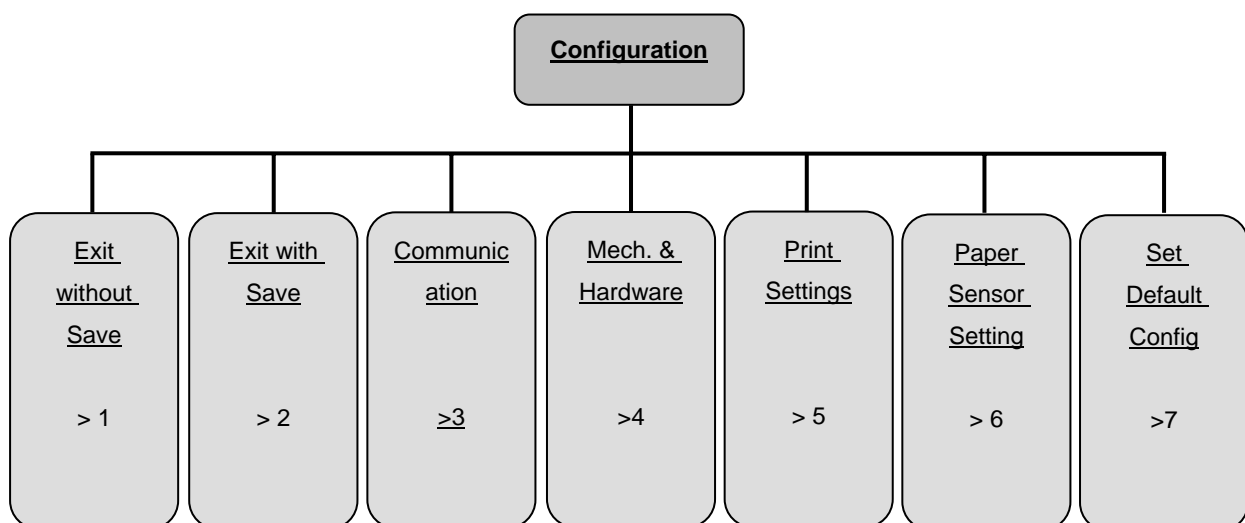


Configuration of the serial interface

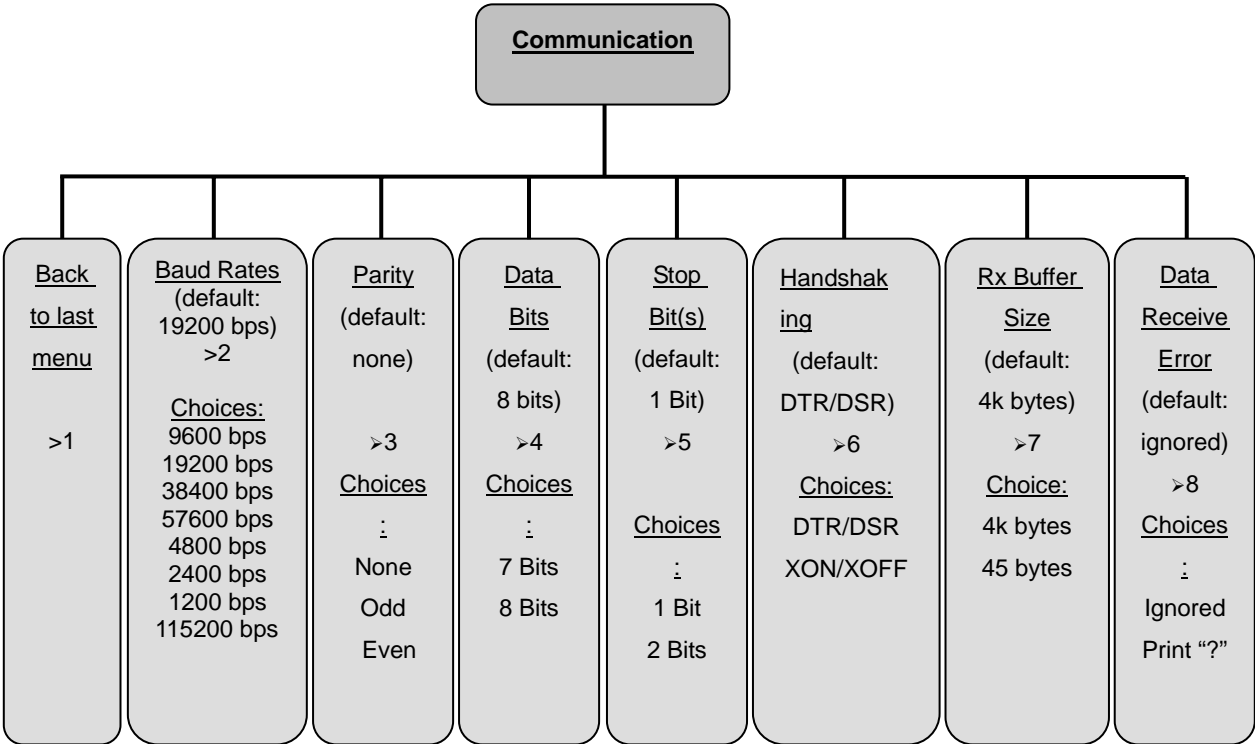


Setting Mechanism and Hardware



Print Setting

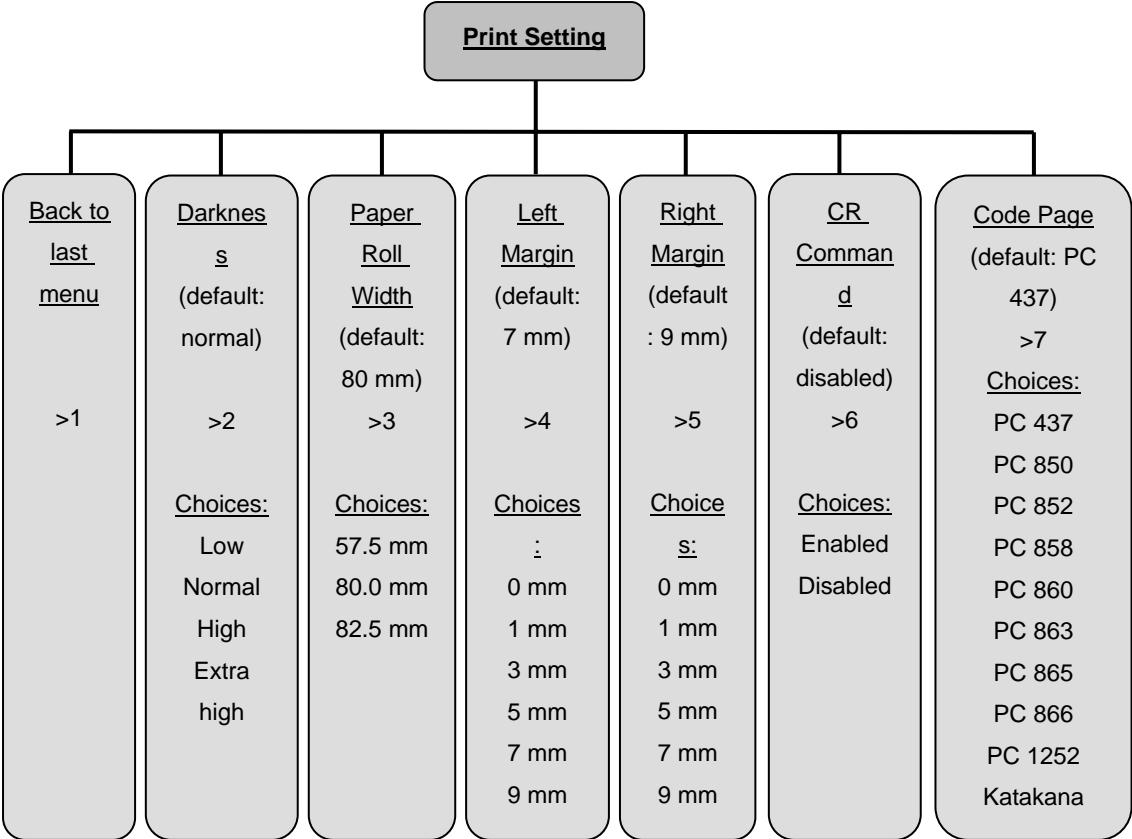

Paper Near-end Sensor setting

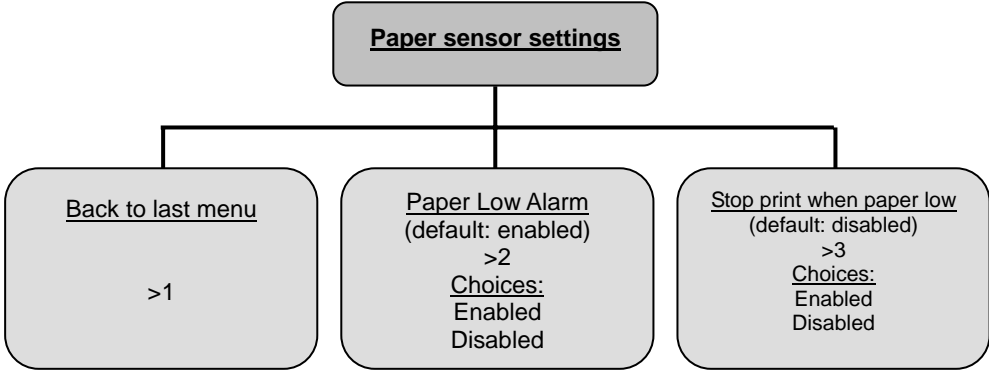

Set Default Configuration

