

Special Instructions for SPS-500 LM048 Installations

SPS-500 Connection if the LM048 is v6.53 or Later

CRS has determined that the SPS-500 does not provide sufficient 5v power from pin 9 of the serial port to run the LM048. You must use the Mini USB cable that is in every kit to supply the LM device with power. The LM048 will need to be plugged into com port #2 to allow room for the USB cable to be plugged in to USB 2 on the SPS-500 rear connection panel as shown in the photo below.



LM048
Device

USB Power
Cable
(Included)