


ELLIX 10 to SAM4s SER 7000

Cable & Connections

ECR DB-9M		Printer RJ-45	
N.C.	1	1	+VCC
RXD	2	2	DSR
TXD	3	3	TXD
DTR	4	4	RXD
SGND	5	5	RTS
DSR	6	6	CTS
RTS	7	7	GND
CTS	8	8	DTR
N.C.	9	9	RI
FGND			FGND

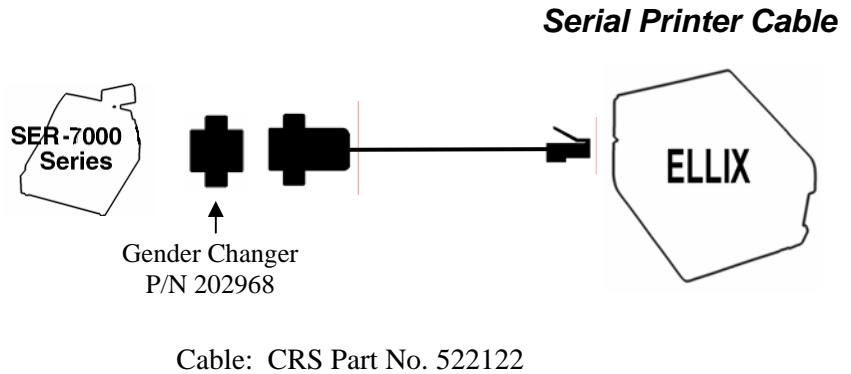

DIP Switch Settings

SW1	ON								
	OFF	X	X	X	X	X	X	X	X
		1	2	3	4	5	6	7	8

- 1 **OFF** (Data receive error: OFF=Print "?")
- 2 **OFF** (Handshaking: OFF=DTR/DSR)
- 3 **OFF** (Word Length: OFF=8 bits)
- 4 **OFF** (Parity Check: OFF=No)
- 5 **OFF** (Parity Selection)
- 6 **OFF** (BAUD=38,400)
- 7 **OFF** (BAUD=38,400)
- 8 **OFF** (Memory Switch selection: OFF= MSW 1)

Special Instructions

1. If using SER 7000 software version 1.50 or later, use device selections for ELLIX 10 in "Serial Port Device Selections". If using earlier version software use "STP-102" selection.
2. Set Serial Port Parameters to match the settings of the Ellix 10. Recommended settings are: BAUD= 38,400, PARITY CHECK=NONE, DATA BITS=8 and STOP BITS=1.